



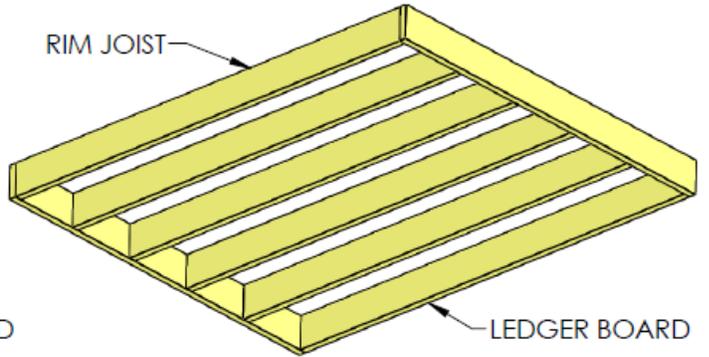




UpSide Under Deck Ceiling is a complete system that transforms your under deck area into a dry and enjoyable outdoor living space. Below you will find installation guidelines.

**TYPICAL INSTALLATION**  
JOISTS PERPENDICULAR TO LEDGER BOARD


**ALTERNATE INSTALLATION**  
JOISTS PARALLEL TO LEDGER BOARD

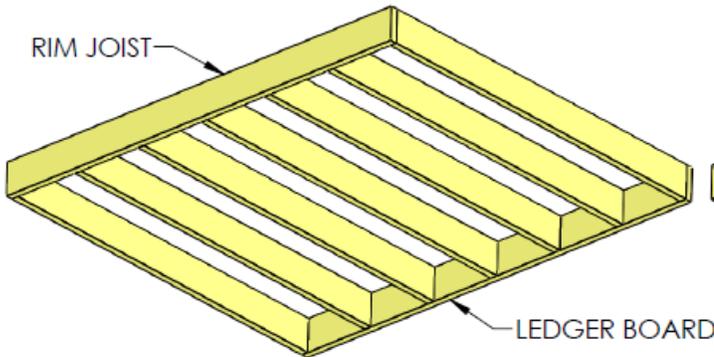

- The ledger board is where the deck attaches to the building.
- Typically, decks are assembled with the joists perpendicular to the ledger board.
- Alternatively, decks can be assembled with the joists parallel to the ledger board.
- These images are looking up from below the deck.

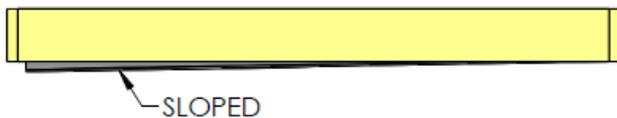
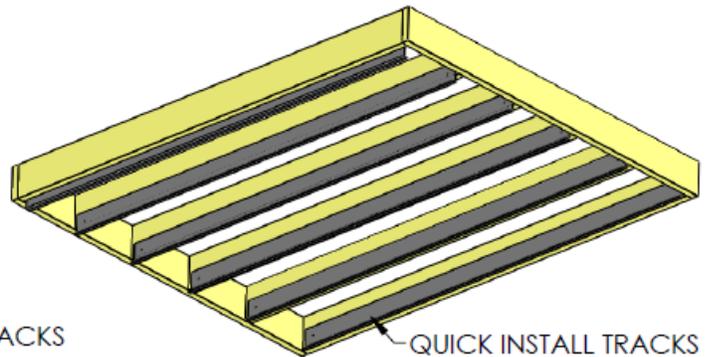
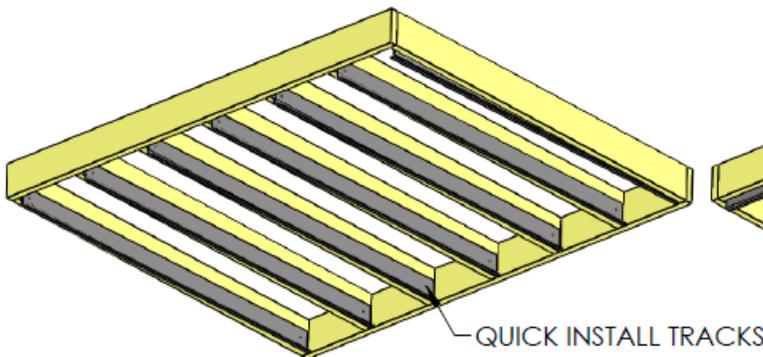


SIDE VIEW

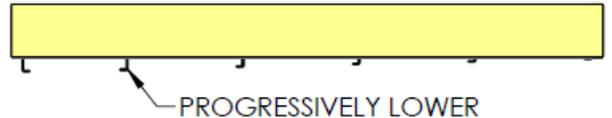






- Attach one Quick Install Track (QIT) to each joist.
- The QITs should pitch downwards from the ledger board to the rim.
- The pitch should be 1/8" per foot or 1" per 8'.

- Attach the first Quick Install Track (QIT) flush with the ledger board.
- Attach the remainder of the QITs progressively lower (1/8" lower for 12" joist spacing, 5/32" for 16", and 1/4" for 24" spacing).
- You can also use a straight-edge or chalk line to establish pitch.
- This will result in a pitch of 1/8" per foot or 1" per 8'.

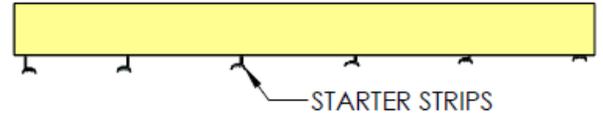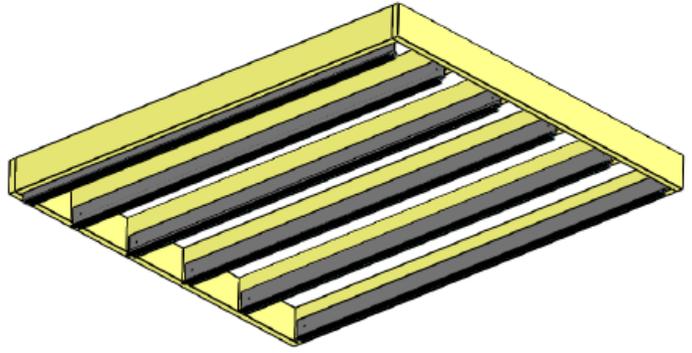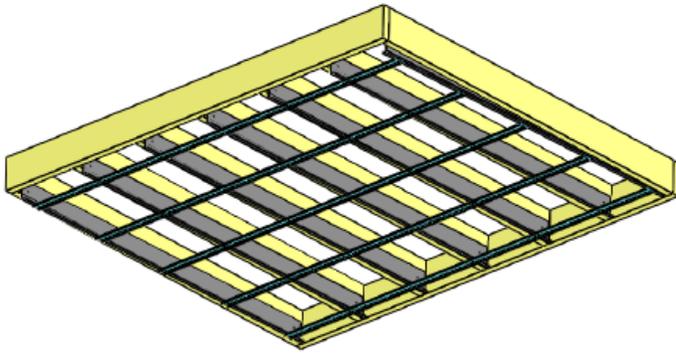

- Attach the Starter Strips to the QITs parallel to the ledger board, from one QIT to the next.

- Attach the Starter Strips to the QIT parallel to the ledger board, one Starter Strip on the entire length of each QIT.

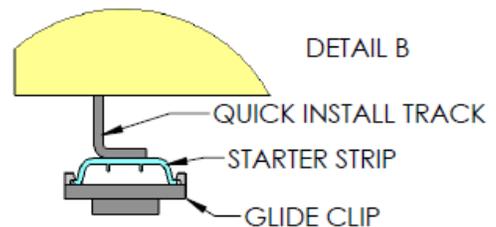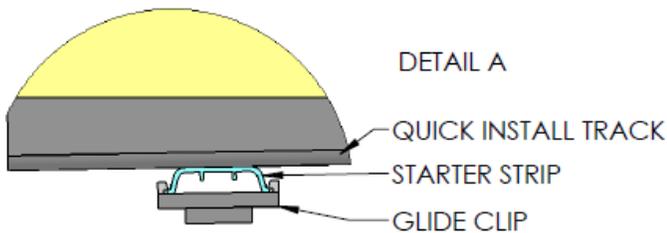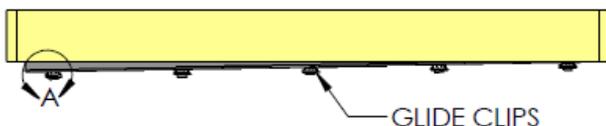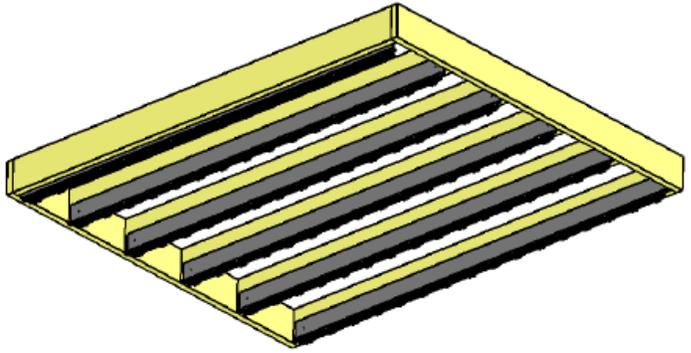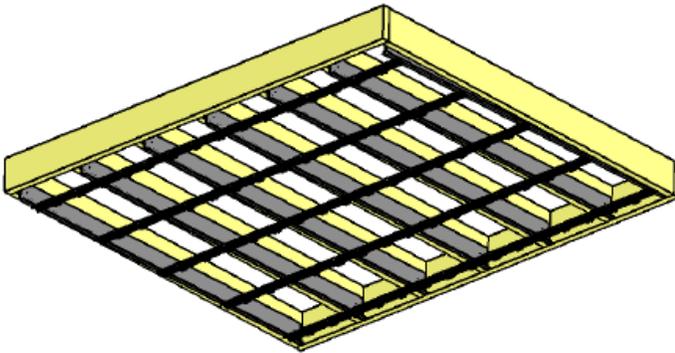

- Snap Glide Clips onto Starter Strips at 6" intervals on each Starter Strip.
- Continue the installation per the UpSide Deck Ceiling installation instructions.

